
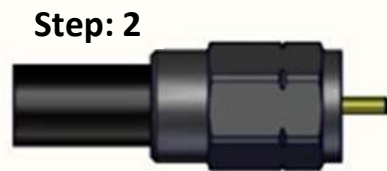


# Mounting Instruction for TrueLock Connector

Type TL707

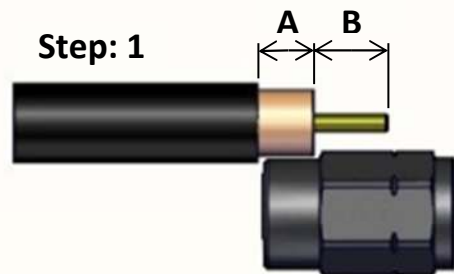

## Step: 1

Use appropriate tool for the stripping operation

- I) Cut and remove the jacket/outer conductor/ dielectric from the inner conductor in one operation to obtain dimension B
- II) Cut and remove the jacket to obtain dimension A, please make sure not to damage the outer conductor

After completed strip operation, the prepared cable dimension should be as following:

**A** = 16,0mm

**B** = 16,0mm

If necessary, clean the cable inner conductor with a conductor cleaner item no. 98500903 and the outer conductor with appropriate equipment.

## Step: 2

Place the back nut over the cable and push it back ward to reach mechanical stop.

## Step: 3

Push the front end of the connector and the back nut (with cable) together by hand. During this step, the cable's inner conductor slips in to the center seizing mechanism of the connector front part.

## Step: 4

Tighten the back nut by hand as far as possible. Then use two open ended spanners to further tighten the back nut to mechanical stop.

The connector body must be kept in place during the tightening.

Tools and Accessories	Item No.
GROUNDING RING TYPE 7	98028567
CABLE CUTTER TRUNK 25.4mm	98028623
CONDUCTOR CLEANER CC-200EUR	98500903
TORQUE WRENCH HEX 22mm 9.0NM (for 3,5/12M interface)	98029110
TORQUE WRENCH HEX 14mm 4.5NM (for FM interface)	98029095
TORQUE WRENCH HEX 15mm 4.5NM (for IEC14M interface)	98029098

**Cabelcon**  
An Amphenol Company

Amphenol Cabelcon ApS  
Industriparken 10, DK-4760 Vordingborg  
www.cabelcon.com  
ccustomer@cabelcon.com

Rev. Date: 11/01-2022